Genuine Miller® Accessories



Desiccant Air Dryer System 195117 Side mount **195117001** Rear mount

For Air Pak™ models only. A regenerating inline air dryer system that eliminates moisture in the air stream to prevent air tool freeze-ups in cold climates. Internal thermostat and heating elements ensure good air quality in all climates. The system can be mounted on the side or on the rear of the machine to meet your installation requirements.



Female Receptacle



Full KVA Adapter Cord 300517 Field NEMA 14-50P to NEMA 6-50R. Adapts engine drive 120/240 V plug to common Millermatic® and Spectrum® 240 V plug.



Full KVA Plug Kit Field **119172** 1-phase, 120/240 V, 50 A plug (NEMA 14-50P) **254140** 3-phase, 240 V, 50 A plug (NEMA 15-50P)



International Plugs Field 255419 1-phase, 120 V, 16 A plug 255416 1-phase, 240 V, 16 A plug 255421 3-phase, 400 V, 32 A plug

Engine Filter Kits

262459 Field. For USA models **246988** Field. For International models Includes all filters required for proper engine maintenance. Oil filter, primary and secondary fuel filter, and primary air filter.

Compressor Kit 279121 Field

For Air Pak models only. Includes oil and all filters required for proper compressor maintenance. Oil filter, air filter and coalescing filter.



Spark Arrestor Kit 195012 Field Prevents particles from leaving the muffler that could

potentially start a fire. Mandatory when operating on California grasslands, brush, or forest-covered land, and in all national forests. For other areas, check your state and local laws. Meets U.S. Forest Service standard 5100-1B.



FA-1D Lockable Flame Arrestor Fuel Cap 043947 Field Fuel cap can be padlocked to

Fuel cap can be padlocked to prevent vandalism. A built-in flame arrestor prevents flames or sparks from entering the fuel tank.



Cable Holder 043946 Field

Saddle-bag-style cable holder. Convenient wrap-around storage of coiled cable for transportation.
Stores 100 feet of 2/0 cable on each side.

Note: For best results do not weld when cable is coiled! Protective cover cannot be used with cable holder.



Protective Cover 301113 Field

Blue water-resistant canvas cover resists stains and mildew, and protects the finish of your welder.

Note: Protective cover cannot be used with cable holder.

MIG (GMAW) or Flux-cored (FCAW)



SuitCase® X-TREME™ 8VS Wire Feeder 951582

SuitCase® X-TREME™ 12VS Wire Feeder 951543

Lightweight, voltage-sensing wire feeders include secondary contactor, gas valve, drive roll kit and MIG gun. See literature M/6.42.



SuitCase® 12RC Wire Feeder 951580 Lightweight and flexible enough to run a variety

of wires up to .062-inch diameter. Includes remote voltage control, drive roll kit and MIG gun. See literature M/6.5.



ArcReach® SuitCase® 8

951726 With Bernard™ BTB Gun 300 A

951727 With Bernard™ S-Gun™

951728 With Bernard™ Dura-Flux™ gun

ArcReach® SuitCase® 12

951729 With Bernard™ BTB Gun 300 A

951730 With Bernard™ S-Gun™

951731 With Bernard™ Dura-Flux™ gun

Portable feeder designed to run off of arc voltage. When paired with an ArcReach power source, provides remote control of the power source without a control cord — saving time and money. See literature M/6.55.



ArcReach® Smart Feeder 951733

For use with ArcReach models only (see page 2 for more information). Includes drive rolls and Bernard™ PipeWorx 300-15 MIG gun. For MIG, FCAW, and advanced RMD® and

pulse processes. See literature M/6.55.

MIG (GMAW)/Flux-cored (FCAW) Guns

See Bernard™ literature SP-BTB for BTB air-cooled MIG guns, and SP-DF for Dura-Flux™ self-shielded flux-cored guns.



Spoolmatic® 30A Spool Gun 130831

Air-cooled, 200amp, one-pound spool gun for

aluminum and stainless MIG. See literature M/1.73. Requires WC-24 Control (137549).

XR™ Wire Feeders and Guns

Push-pull system designed to handle difficult-to-feed soft alloy wires such as aluminum. See literature M/1.7 through M/1.75.

AC TIG (GTAW) Welding



Dynasty® 210 SeriesFor portable AC/DC TIG.
See literature AD/4.81.

