

Powermax® gouging consumables

for Duramax™ and Duramax RT torch series



Standard gouging									
Amps	Gouging shield		Retaining cap	Nozzle	Electrode	Swirl ring			
45-105	Max removal 220798	Max control 420480	220854	220797	220842	220857			
				220991 (105 A)		220994 (105 A)			

Max removal gouging shield

Designed for aggressive metal removal, achieving deep gouge profiles and extreme metal washing applications.

Max control gouging shield

Designed for more precise metal removal, achieving a shallow gouge profile and light washing applications.



HyAccess extended gouging consumables

Designed for gouging in hard to reach or confined spaces. Recommended to operate at a maximum of 65 A. HyAccess[™] gouging nozzle, electrode and retaining cap also available in a starter pack: ordering part number 428446.

Recommended gouging shield

By application and depth profile



WARNING

SPARKS AND HOT METAL CAN INJURE EYES AND BURN SKIN. When firing the torch at an angle, sparks and hot metal will spray out from the nozzle. Point the torch away from yourself and others.

Gouge a workpiece

Steps:

 Hold the torch so that the nozzle is within 1.5 mm (1/16 inch) from the workpiece before firing the torch.



	1/4 inch (6 mm)	¾ inch (9.5 mm)	½ inch (12 mm)	³ ⁄4 inch (20 mm)
Washing	•	V	•	•
Back gouging	▼	V	•	•
Weld repair	▼ ■	▼ ●	▼	•

- ▼ 420480 Max control
- 220798 Max removal
- HyAccess™

- Hold the torch at a 40° angle to the workpiece with a small gap between the torch tip and the workpiece. Press the trigger to obtain a pilot arc. Transfer the arc to the workpiece.
- the workpiece. Press the trigger to obtain a pilot arc. Transfer the arc to the workpiece.

 In other words, push the plasma arc in the direction of the gouge you want to create. Keep a small distance between the torch tip and the molten metal to avoid reducing consumable life or damaging the torch.

 Changing the torch angle changes the dimensions of the gouge.

Note: A heat shield is available for added hand and torch protection (428347).

Direction of travel

Gouge profiles can be varied by increasing or decreasing the following variables

- Speed of torch over the workpiece—faster gouge speeds decrease the depth and width of the profile
- Angle of the torch to the workpiece—increasing the vertical angle of the torch will decrease width and increase depth of the profile


3. Maintain an approximate


40° angle to the workpiece as you feed into the gouge.


 Current output of the power supply—decreasing the current of the power supply will decrease width and depth of the profile


Impact to gouge profile parameters

- X = vertical angle
- Y = arc stretch*
- Z = horizontal angle
 - * Dependent on amperage

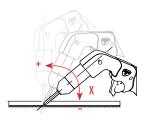

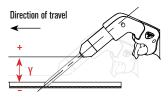

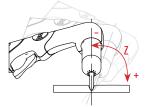

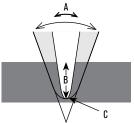

X, Y, Z adjustments		A	В	C
X	Increase vertical angle	~		
	Decrease vertical angle		‡	V
Υ	Increase arc stretch		\$	\bigvee
	Decrease arc stretch		$\Big \Big \Big $	\bigvee
Z	Increase horizontal angle		\$	
	Decrease horizontal angle	_	\$	V

For more information, visit: www.hypertherm.com

Hypertherm, Powermax, Duramax, and HyAccess are trademarks of Hypertherm Inc. and may be registered in the United States and/or other countries. All other trademarks are the property of their respective owners.

Please visit www.hypertherm.com/patents for more details about Hypertherm patent numbers and types.

© 9/2022 Hypertherm, Inc. Revision 11 896910

HYPERTHERM ASSOCIATES

As 100% Associate owners, we are all focused on delivering a superior customer experience. www.hyperthermassociates.com/ownership

Environmental stewardship is one of Hypertherm Associates' core values. www.hyperthermassociates.com/environment

100% Associate-owned











