INTRODUCTION

The RAZORWELD RWX7000 ADF DIGITAL welding helmet is a high quality Solar and Battery operated helmet incorporating RAZORBLUE lens technology. The helmet features 4 independent Arc sensors and has an impressive 3.94" x 3.28" viewing area. The fully Digital operation for Shade, Sensitivity, Delay and Weld/Grind control make this a standout product. The Memory functions allows the operator to store different shade, sensitivity and delay options. Our helmet is lightweight, beautifully designed and offers excellent neck and head protection. This high quality and affordable Electronic Helmet make it a standout on todays market and we offer a 2 year warranty. The RWX7000 helmet comes stacked with extra features and comes complete in a color box.

WARNING

Read and understand all instructions before using.

- Be sure that the shade of the lens is the correct shade number for your welding or cutting application
- The helmets and lenses are not suitable for overhead welding applications, lazer welding or cutting.
- Welding helmets are designed to protect the eyes and face from sparks, spatter and harmful radiation under normal welding and cutting conditions. They are not designed to be used for purposes other than these.
- This helmet will not protect against explosive devices or corrosive liquids. Machine guards or eye splash protection/ devices must be used when these conditions exist.
- Impact resistant, primary eye protection, spectacles or googles that meet current ANSI specifications are to be worn when necessary and when required when using this helmet.
- Avoid work positions that could expose unprotected areas of the body to sparks, spatter, direct and indirect radiation. Use adequate precautions and common sense when placed in a position which could result in Arc burn.
- Check for component tightness before each use. Ensure also that the outer and inner protective lens are free from spatter and dirt so that the ADF filter can function normally.
- Inspect all operating parts before each use for signs of wear and/or damage. Any scratched, cracked or pitted parts should be replaced immediately. If in doubt replace!

- Do not make any modifications to either the welding lens or helmet, other than those specified in this manual. Do not use any replacement parts other than those specified in this manual, Unauthorized modifications and replacement parts will void the warranty and expose the user to the risk of personal injury.
- The recommended operating temperature range for the welding lens is 14°F ~ 149°F (-10°C ~ 65°C). Do not use this device beyond these temperature limits.
- If this lens does not darken when striking the arc, stop welding immediately and call the reseller
- Do not immerse this lens in water as this model is not waterproof
- Do not use any solvents on any lens or helmet components
- Failure to follow these warnings and/or failure to follow all of the operating instructions could result in severe personal injury.

Main specifications

Power supply

Certification

RazorBlue lens

Memory function

Filter Dimension	4.5" x 5.2"
View size	3.94"x 3.28"
Classification	1/1/1/1
Sensors	4
Light state	4
Dark state	Variable shade 5-9/9-13
Power Control	Fully automatic
Switching time @ 74F	0.04ms
Sensitivity control	Internal
Delay Time control	Adjustable (Internal)
Time from dark to light	Adjustable (Internal)
Grinding function	Yes
Grinding warning flash	Yes
Low battery indicator	Yes
Operation temperature	14F-149F
Storing temperature	-4F-185F

The RWX7000 HAS A 2 YEAR WARRANTY

Yes

Solar + replaceable Battery


CSA/CAN, ANSI, CE

1. Assemble the mask as shown in the construction and assembly figure (see page 6) Please take care when removing the plastic material from both the outer and inner lens and avoid touching the outside of the lens with your fingers. Fingers often contain oils that could damage and smear the lens.

2. The power supply

The power of the helmet is provided by solar cells with two lithium batteries . Turning on or off is automatically controlled by the electronic circuit. It is not necessary to turn the welding helmet on or off to conserve battery life or to initiate the welding shade activity

- 3. Screen Icon Explanation is outlined as below
- 4. This helmet is fitted with the RazorBlue Lens Technology. This Technology is a feature that greatly improves the optics allowing the user to see a full spectrum of colors increasing vision clarity. It also helps to alleviate eye fatigue making it safer for extended periods of welding.

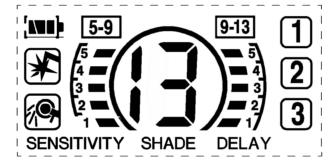

	2 2	3		[5-9] ₄		<u>[9-13]</u>
battery status	Welding indication	Grinding indication		shade range 5-9		shade range 9-13
SENSITIVITY 6	= 5 = 4 = 3 = 2 = 1) DELAY	7		8 SHADE		1 2 9 3
sensitivity indication 1 (low) to 5(high)	delay indication: 1 (fast 0.1s) to 5(slow 0.9s)		Shade reading		memory selection	



Note: The icon buttons on the left of the screen need to be pressed TWICE to start the setting procedure.

5. Shade selection

For lower shade selection press repeatedly until the 5-9 icon appears in the top left hand corner. this will start at shade 5. Press the SHADE button and you can scroll up to shade 9. Press the weld grind button to take you back to shade 9-13 settings.

6. Grind Selection

To put the lens into GRIND mode simply press the weld/grind button until the no# 4 comes up on your screen. This number will be accompanies by a grinding icon on the bottom left of your screen. You will also have a red light flashing next to the grind lcon button to confirm you are in grind mode.

7. Sensitivity selection

Press the sensitivity button twice to start the setting. The highest sensitivity (5) will flash. press the sensitivity button again and then you can scroll through all your sensitivity settings from 1 to 5. Select which sensitivity level you wish to use, it's as simple as that. Note: Sensitivity settings will **not** work in GRIND mode.

8. Delay selection

Press the delay button icon to start the delay setting sequence. You simply press this Icon button and scroll up or down to choose your required delay time. In this mode the number 1 represents 0.1s and the number 5 represents 0.9s.

9. Memory setting

The RWX7000 series helmet has a memory function that can store 3 of your most frequently used settings. These settings can be stored and re-activated easily by using the memory function on the icons on the right of the cartridge. These are numbered 1,2,3. To store your desired setting press one of the 1, 2 or 3 buttons and keep pressed until this icon number stops flashing on the screen. This memory setting is now complete and will store whatever setting you currently had on your digital readout screen. It is simple to change your memory by changing your settings and then press the memory function number and keep pressed until the flashing stops. To re activate one of your 3 settings just press that number and it will automatically revert to that stored setting.



In this example the memory is set as memory 2, the shade is 9, the sensitivity is 5 and the delay is 5 as well.



2

(3)

Note:To disengage your memory setting simply press any of the icon buttons on the left of the screen. When a general setting is completed, the ADF settings will be stored for 5 minutes The next time you start to weld, it will automatically activate to the last general settings. Memory will NOT operate in Grind mode.

10. Battery indicator

The battery Icon is located on the top left of the digital screen. Please replace the the battery when the energy/ charge bars are down to one bar otherwise the switching time will become slower and shade accuracy will be compromised.

11. Replacing the Battery

Open the battery holder which is located at the bottom left of the cartridge. Take out the battery and simply replace with a new one.

12. Care of your RazorBlue Lens

Keep clean using a soft, dry and clean cloth. Ensure that you replace your inner and outer protection lens on a regular basis to maintain the integrity and protection of your cartridge lens


WARNINGS:

- 1. Be sure that the helmet is be used in its correct condition and check it often according to the WARNING content.
- 2. There is a liquid crystal-valve in the filter, although it has an inner and outer protection plate, it is important to avoid heavy knocks and unnecessary rough treatment.
- 3. The outer protection plate of helmet should be periodically inspected and cleaned, keep it clear. if a break, crack or pitting occurs replace immediately
- 4. In order to operate the helmet more efficiently and safely, please select the correct dark shade number.
- 5. The high quality high technology features of the filter must be kept away from water as the lens is NOT waterproof.
- 6. Please ensure that the filter sensors receive as much of the ARC light as possible to fully operate the sensors so the helmet can operate at the optimum level. Make sure they are clean and un-obstructed
- 7. Please use the automatic filter at temperatures between -10°C-65°C(14°F-149°F)
- 8. Please don't disassemble the filter, any problems arising, please contact our company or agent.

CARTON CONTENTS

Helmet body including Cartridge , Operation manual, Headband and bag.

CONSTRUCTION AND ASSEMBLY FIGURE FOR RWX7000 AUTOMATIC WELDING HELMET WITH RAZORBLUE LENS

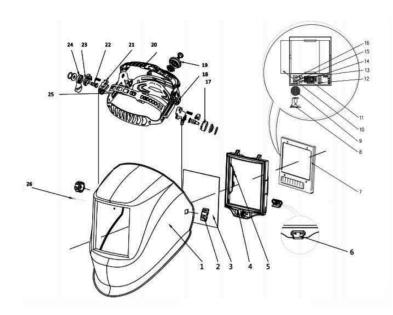

1. Helmet shell	14.Delay button
2. Headgear screw	15. Sensitivity button
3. Outer protection lens	16. Shade button
4. ADF cradle	17. Block washer(on left)

Magnifying lens holder 18. Headgear slider (with 5 slots)
 Cradle lock
 19. Headband tightness adjusting knob

7. Auto filter
20. Headband tightness adjusting knob
21. Block washer adjustment(back and forth)
21. Block washer adjustment(up and down)

Battery
 Headband screw(long, on right)
 Inner protection lens
 Block washer (on right)

11. ADF setting panel 24. Segmental positioning plate (on right) 12. Memory buttons(3) 25. Headband adjusting buttons

13. Weld/Grind button 26. Positioning point for the segmental plate

Arc Gouging Plasma Cutting IIG Plate Weld ELDING PROCESS Elec - OI -5 -5 -8 5 Shade10 Shade 9 -8 ⇉ Shade10 Shade10 -5 **CURRENT AMPERES** Shade11 Shade10 -8 Shade11 150 175 ⇉ Shade13 Shade12 Shade12 Shade12 275 ade13 ᆲ Shade14 Shade13 -6 4 Shade13 Shade13 450 귥 귥 4 4

RECOMMENDED SHADE

NUMBERS

INSTRUCTION MANUAL FOR RWX7000 AUTOMATIC WELDING HELMET



INCORPORATING RAZORBLUE LENS
TECHNOLOGY

PLEASE READ THIS MANUAL BEFORE OPERATING THE RWX7000



